Introduction

Thank you for purchasing this television set.
This handbook has been designed to help you install and operate your TV set.
We would strongly recommend that you read it thoroughly.
We hope our technology meets entirely with your satisfaction.

Table of Contents

Installation

Presentation of the LCD Television 2
Positioning the television set 2
Remote control 2
Remote control keys 3
Connecting 4
Connecting peripheral equipment 4
Switching on 4
Quick installation 5
Program sort 5
Manual store 6
Other settings in the Install menu 6

Operation

Picture settings 7
Sound adjustments 7
Feature settings 7
Teletext 8

Practical information

Tips 8

English

Recycling
The materials used in your set are either reusable or can be recycled.
To minimise environmental waste, specialist companies collect used appliances and dismantle them after retrieving any materials that can be used again (ask your dealer for further details).

Downloaded from www.Manualslib.com manuals search engine

Presentation of the LCD Television

❶ Television keys:
- ⏻: to switch the TV on or off.
- ⊖ ⊕: to adjust sound level.
- ⓥ ⓐ: to select programmes.
- MENU: to access or close menus, simultaneously press the ⊖ and ⊕ keys. The ⓥ ⓐ keys can be used to select an adjustment and the ⊖ ⊕ keys to make that adjustment.

❷ On-light and infrared sensors.

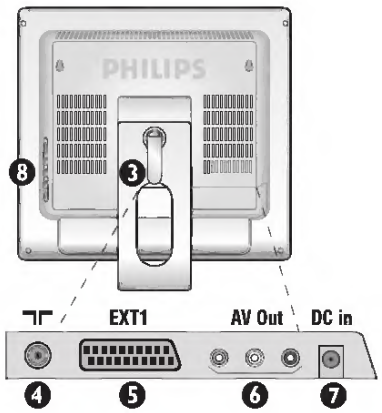

Rear of set :

The main connections are made at the bottom of the television.

For more details on connections see page 4.

❸ Adjustable stand.

The stand can be removed and replaced with a wall mounting kit available as an option (ask your dealer).

❹ TV aerial sockets
❺ EXT1 socket
❻ Audio/Video output for connecting an amplifier.
❼ DC supply socket
❽ Side connections

Positioning the television set

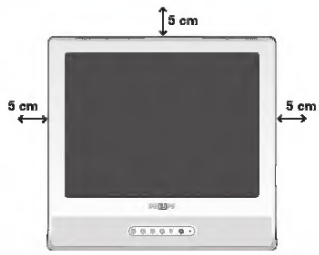

Place your TV on a solid stable surface. To avoid danger do not expose the TV to water, or a heat source (e.g. lamp, candle, radiator). Do not obstruct the ventilation grid at the rear.

Remote control

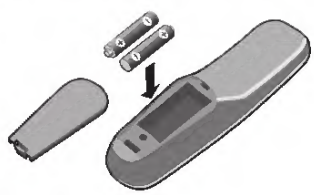

Insert the two R6-type batteries supplied, making sure they are the right way round.

The batteries supplied with the appliance do not contain mercury or nickel cadmium so as to protect the environment. Please do not discard your used batteries, but use the recycling methods available (consult your distributor).

Downloaded from www.Manualslib.com manuals search engine

Remote control keys

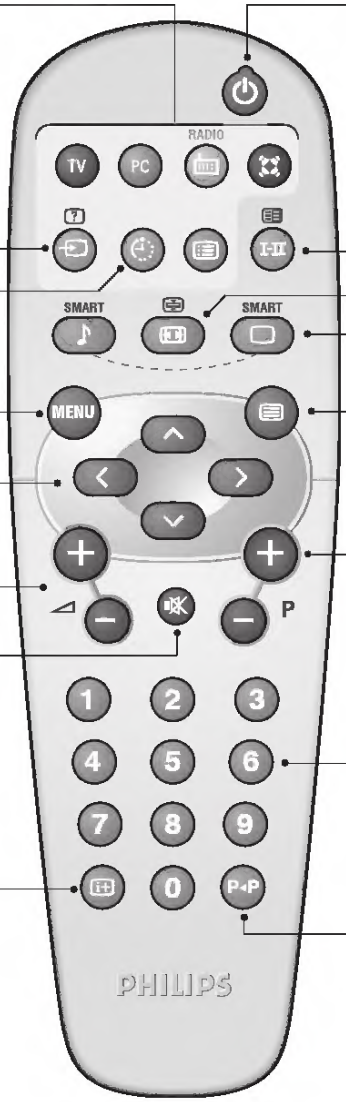

Teletext keys (p. 8)

Select peripherals (p.4)
Press several times to select the required EXT connector.
Most equipment (decoder, video recorder) carries out the switching itself.

Time display
To display or remove the time transmitted by the teletext of programme n°1.

Menu
To call up or exit the menus.

Cursor / Format 16:9
These 4 keys are used to navigate through the menus. The ⌃⌄ keys are used to enlarge or compress the picture vertically.

Volume
To adjust the sound level

Mute
To mute or restore the sound.

Screen information
To display the programme number and the time remaining on the timer.

Standby
To set the TV to standby mode. To switch the TV set on again, press ⏻, P − + or 0 9.

Sound mode
Used to force programmes in **Stereo** and **Nicam Stereo** to **Mono** or, for bilingual programmes, to choose between **Dual I** or **Dual II**.

16:9 Format
To select different screen formats.

Smart picture and sound
Used to access a series of predefined picture and sound settings.
The **personal** *position relates to settings selected from the menus.*

Teletext (p. 8)

Selecting TV programmes
To move up or down a programme. The number and the sound mode are displayed for a few seconds.
For some TV programmes the title of the programme appears at the bottom of the screen.

Numerical keys
For direct access to programmes. For a 2 digit programme number, the 2nd digit must be entered before the dash disappears.

Previous programme
To access the previously viewed programme.

Downloaded from www.Manualslib.com manuals search engine

Connecting

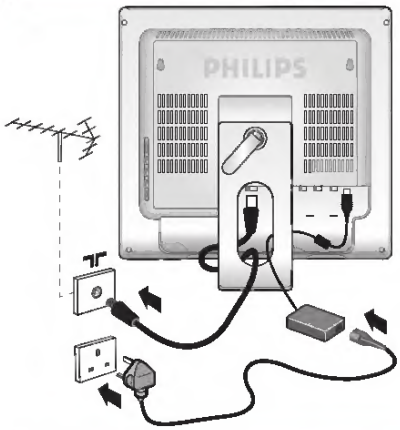

The TV works with a DC supply (the voltage is indicated on the label). Only use the AC-DC adaptor supplied with the TV.

- Connect the DC plug of the adaptor to the TV DC socket. Leave a space round the adaptor for ventilation.
- Insert the adaptor power lead and insert the mains plug into the wall socket.
- Use the aerial connection lead supplied and connect the socket situated at the bottom of the TV to your aerial socket.
- Arrange the leads by passing them through the television stand.

Connecting peripheral equipment

Video recorder

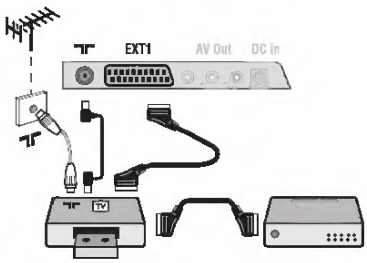

Video recorder (or DVD recorder)
Carry out the connections shown opposite, using a good quality euroconnector cable.

Video recorder with decoder
Connect the decoder to the second euroconnector socket of the video recorder. You will then be able to record scrambled transmissions.

Other equipment

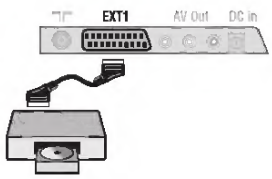

Satellite receiver, decoder, DVD, games, etc.
Make the connections as shown opposite.

Side connections

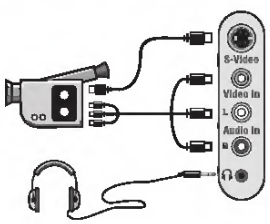

Make the connections as shown opposite. With the ⊡ key, select **S AV**.

Headphones
When headphones are connected, the sound on the TV set will be cut. The ⊖ **P** ⊕ keys are used to adjust the volume level.
The headphone impedance must be between 32 and 600 Ohms.

Amplifier

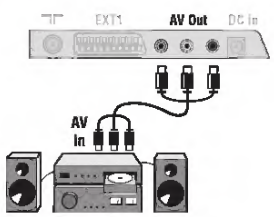

To connect a Hi-fi unit, use an audio/video connecting cable and connect :
- The "L" and"R" outputs of the TV set to an "AUDIO IN" "L" and "R" of the Hi-fi unit.
- The "VIDEO" output of the TV set to a "VIDEO IN" input of the amplifier.

Downloaded from www.Manualslib.com manuals search engine

Switching on

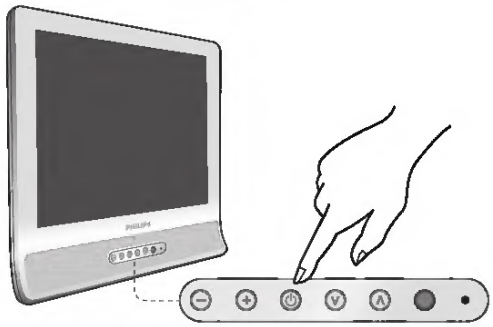

To switch on the set, press the ⏻ key.
Go straight to the Quick Installation chapter.
If the TV remains in standby mode (red indicator), press the P ⊕ key on the remote control.

Plug & Play

Quick installation

When you turn on the TV set for the first time, a menu is displayed on screen. This menu prompts you to select the country and language for the menus:

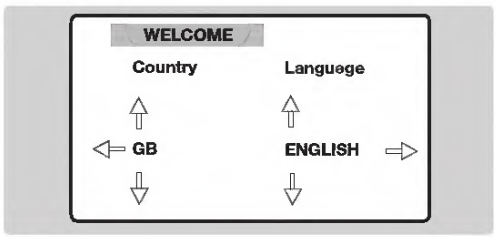

⚠ *If the menu is not displayed, press and hold down the ⊖ and ⊕ keys on the TV set for 5 seconds to display the menu.*

1. Use the ⌃⌄ keys on the remote control to select your country and validate with ›.
   If your country does not appear in the list, select choice "..."
2. Next select your language using the ⌃⌄ keys and validate with ›.
3. The search starts automatically.
   Finally the **INSTALLATION** menu appears automatically.
   If the programmes found have not been correctly numbered, use the **Sort** menu to renumber them.
   If no picture is found see Tips (p. 8).
4. To quit the menus, press TV.

Programme sort

This menu allow you to change the numbering of programmes.

1. Press the MENU key. The **MAIN MENU** is displayed on the screen.
2. Select the **INSTALLATION** menu with the cursor then the **Sort** menu.
3. Select the programme you want to move with the ⌃⌄ keys and press ›.
4. Then use the ⌃⌄ keys to choose the new number and confirm with ‹.
5. Repeat steps 3 and 4 as many times as required to move the programmes.
6. To exit the menus, press MENU several times.

Downloaded from www.Manualslib.com manuals search engine

Manual store

This menu is used to store the programmes one at a time or to add a programme to the existing list.

❶ Press the MENU key to display the **MAIN MENU**. Select **INSTALLATION** with the cursor then the manual store **menu** then press OK.

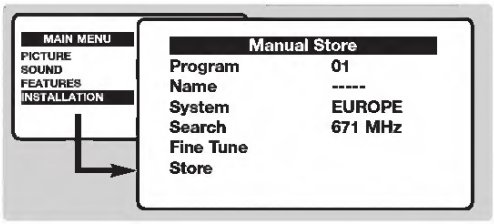

❷ **System** : select **Europe** (automatic detection*) or according to the versions **Western Europe** (BG standard), **Eastern Europe** (DK standard), **United Kingdom** (I standard) or **France** (LL' standard).

** Except for France (LL' standard), you must select the choice* **France**.

❸ **Search** : press ›. The search starts. Once a programme is found, the scanning stops.
Go to the next step. If you know the frequency of the required programme, enter its number directly with the 0 to 9 keys.
If no picture is found, consult the possible solutions (p. 8).

❹ **Fine tune** : if the reception is not satisfactory, adjust using the ‹ › keys.

❺ **Program :** enter the desired number with the keys ‹ › or 0 to 9.

❻ **Name :** use the ‹ › keys to move around the name display area (5 characters) and the ^ v keys to select the characters.
When the name has been entered press the ‹ key to exit.

❼ **Store** : press ›. The programme is stored.

❽ Repeat steps ❷ to ❼ for each programme to be stored.

❾ To exit the menus press MENU several times.

Other settings in the Installation menu

❶ Press the MENU key and select the **INSTALLATION** menu :

❷ **Language :** to change the display language for the menus.

❸ **Country :** to select your country (**GB** for Great Britain).
This setting is used for the search, automatic pragramme sort and teletext display. If your country does not appear in the list, select "..."

❹ **Auto Store** : to start automatic search for all programmes available in your region.
Finally the **INSTALLATION** menu appears automatically. If the programmes found have not been correctly numbered, use the **Sort** menu to renumber them.
If no picture is found see Tips (p. 8).

❺ If you want to exit the menus, press MENU several times.

Downloaded from www.Manualslib.com manuals search engine

Picture settings

1. Press MENU, select **PICTURE** and press ›. The **PICTURE** menu appears :

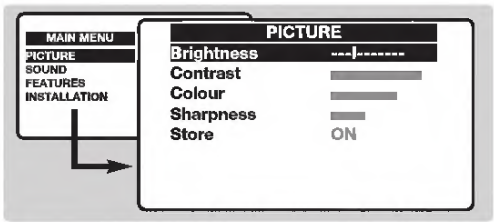

2. Use the ‹› keys to select a setting and ‹› keys to adjust.
3. Once the adjustments have been made select **Store** and press › to store them.
4. Press MENU several times to exit the menus.

Description of the adjustments:

- **Brightness** : this changes the picture brilliance.
- **Contrast** : this changes the difference between the light and dark tones.
- **Colour** : this changes the intensity of the colour.
- **Sharpness** : this changes the picture definition
- **Store** : to store the picture adjustments.

Sound adjustments

1. Press MENU, select **SOUND** (‹) and press ›. The **SOUND** sound menu is displayed :

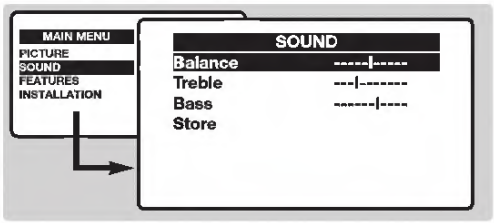

2. Use the ‹› keys to select a setting and the ‹› keys to adjust.
3. Once the adjustments have been made select **Store** and press › to store them.
4. To quit the menus press MENU several times.

Description of the settings :

- **Balance** : to balance the sound on the left and right speakers.
- **Treble** : this alters the high frequency sounds.
- **Bass** : this alters the low frequency sounds.
- **Store** : this is used to store sound settings.

Feature settings

1. Press MENU, select **FEATURES** (‹) and press ›. You can adjust:

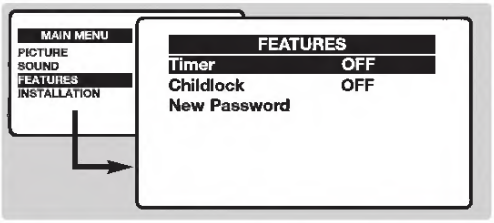

2. **Timer** : to select an automatic standby period.
3. **Childlock** : This menu lets you block use of the TV set.
4. You must enter your secret access code. The first time, key the code 0711. The menu is displayed.
5. Switch **Child Lock** to **ON**. The TV set cannot be used until the correct password is entered.
6. To cancel switch **Child Lock** to **OFF**.
7. To change the code select **New Password** and enter a new 4 figure code. Confirm by entering a second time.
   If you have forgotten your secret code, enter the universal code 0711.
8. Press MENU several times to exit the menus.

Downloaded from www.Manualslib.com manuals search engine

Teletext

Teletext is an information system broadcast by certain channels which can be consulted like a newspaper. It also offers access to subtitles for viewers with hearing problems or who are not familiar with the transmission language (cable networks, satellite channels, etc.).

Press :		You will obtain:
	Teletext on/off	This is used to call teletext, change to transparent mode and then exit. The summary appears with a list of items that can be accessed. Each item has a corresponding 3 digit page number. *If the channel selected does not broadcast teletext, the indication 100 will be displayed and the screen will remain blank (in this case, exit teletext and select another channel).*
0/9 ⊖P⊕	**Selecting a page**	Enter the number of the page required using the 0 to 9 or ⊖ **P** ⊕ keys. Example: page 120, enter 1 2 0. The number is displayed top left, the counter turns and then the page is displayed. Repeat this operation to view another page. *If the counter continues to search, this means that the page is not transmitted. Select another number.*
	Direct access to the items	Coloured areas are displayed at the bottom of the screen. The 4 coloured keys are used to access the items or corresponding pages. *The coloured areas flash when the item or the page is not yet available.*
	Contents	This returns you to the contents page (usually page 100).
	Enlarge a page	This allows you to display the top or bottom part of the page and then return to normal size.
	Stop sub-page acquisition	Certain pages contain sub-pages which are automatically displayed successively. This key is used to stop or resume sub-page acquisition. The indication appears top left.
	Hidden information	To display or hide the concealed information (games solutions).
	Direct selection of a sub-page	This allows you to select teletext sub-page.
	Temporary stop	This is used to temporarily disable or activate the teletext display.

Tips

Poor reception
The proximity of mountains or high buildings may be responsible for ghost pictures, echoing or shadows. In this case, try manually adjusting your picture: see **Fine Tune** (p.6) or modify the orientation of the outside aerial. Does your antenna enable you to receive broadcasts in this frequency range (UHF or VHF band)?

No picture
Have you connected the aerial socket properly? Have you chosen the right system? (p. 6). Poorly connected euroconnector cables or aerial sockets are often the cause of picture or sound problems. Check all connections.

No sound
If on certain channels you receive a picture but no sound, this means that you do not have the correct TV system. Modify the **System** setting (p. 6).
The amplifier connected to the TV does not deliver any sound? Check that you have not confused the audio output with the audio input.

Standby
If the set receives no signal for 15 mins, it automatically goes into standby mode.
To save power, your set is fitted with components that give it a very low power consumption when in standby mode (less than 2 W).

Cleaning the set
Only use a clean, soft and lint-free cloth to clean the screen and the casing of your set. Do not use alcohol-based or solvent-based products.

Still no results?
Disconnect the mains plug of the TV for 30 seconds then reconnect it.
If your TV set breaks down, never attempt to repair it yourself: contact your dealer's after-sales service.

English

3111 256 1547.1

Downloaded from www.Manualslib.com manuals search engine